

## Manual

### 1. Boot

When the device is off, click the "POWER" button, the device is turned on, the display shows the temperature and running time, the buzzer sounds for 2 seconds, the device is working normally, and the voice prompts the entertainment state at this time.

When the device is on, click the "POWER" button, the device will shut down, the display will go off, and the heating will stop.

### 2. Temperature setting

When the device is in the Bluetooth state, click or long press the left "+" button, the temperature setting value will increase, the maximum value is 65 degrees Celsius or 150 degrees Fahrenheit; click or long press the left "-" button, the temperature setting value will decrease, the minimum value is 15 degrees Celsius or 60 degrees Fahrenheit. Press the left "+" button and the left "-" button simultaneously to switch between Celsius and Fahrenheit.

When the device is in the FM or MP3 pause state, the above operations can also be achieved.

### 3. Time setting

When the device is in the Bluetooth state, click or long press the right "+" button, the time setting value increases, the maximum value is 99; click or long press the right "-" button, the temperature setting value decreases, and the minimum value is 1. Press the left "+" button and the left "-" button at the same time to switch between the stop counting "-" state and the timing state.

When the device is in the FM or MP3 pause state, the above operations can also be achieved.

### 4. Entertainment settings

Click the "SET" button to switch Bluetooth status, FM status, and MP3 status. If the U disk is not inserted, the MP3 status cannot be realized.

When the device is in the FM state, click the left "+" button to switch to the previous station, and click the left "-" button to switch to the next station; press the left "+" button and the left "-" button at the same time to enter the full search state, This process will probably last for about 2 minutes, until the "▲" is on and the device only needs to search for the first time it is used.

Click the right "+" button to increase the volume, and click the right "-" button to decrease the volume.

Click the "LAMP" button to switch between running status and pause status.

When the device is in MP3 state, click the left "+" button to switch to the previous song, and click the left "-" button to switch to the next song;

Click the right "+" button to increase the volume, and click the right "-" button to decrease the volume.

Click the "LAMP" button to switch between running status and pause status.

**5.Other**

When the device is in the Bluetooth state, click the "LAMP" button to switch the lights.  
When the device is in the FM or MP3 pause state, the above operations can also be achieved.